


DRYCO


SKYLIGHTS

INSTALLATION OF "L" FRAME WOOD CURB MOUNTING SKYLIGHT ON SLOPED ROOF

STEP 1: Construct a wood curb (2"x6" min.) directly above the rafter frame opening. Install roofing material until the shingles are even with or a row past the curb.

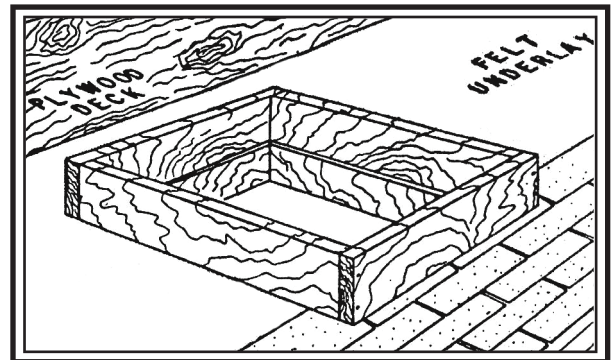

STEP 2: Fit sheet metal flashing to the curb surfaces with a 3" flange around the base and a 6" flange on the uphill side. Corners should be overlapped and edges joined with tabs. Seal the top and under sides of metal flanges with roofing mastic.

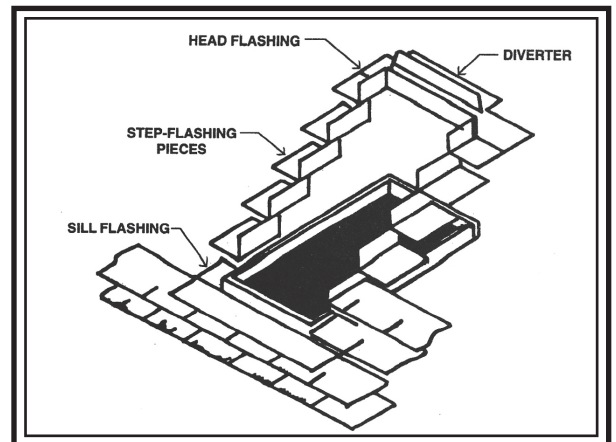

STEP 3: Continue to install shingles. Apply a bead of caulking on top of curb around the perimeter. Set the skylight down, fasten with No. 14 cadmium-plated wood screws.

