


DRYCO


SKYLIGHTS

INSTALLATION OF SELF FLASHING-TYPE SKYLIGHT ON SLOPED ROOF

STEP 1: When shingles are even with or a row past the bottom edge of the opening, stop and place a 1" wide by 1/8" thick bead of good grade roofer's plastic cement around the perimeter of the hole, staying about 1" away from the edge.

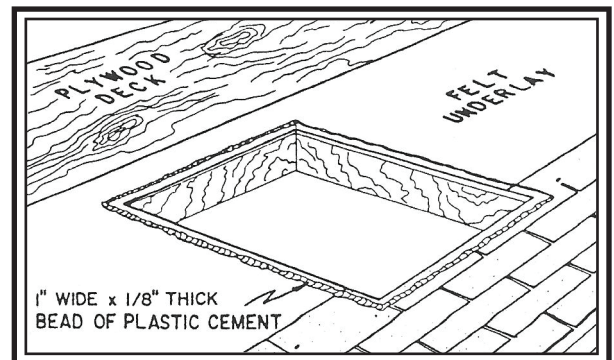

STEP 2: Center the skylight over the hole and nail it to the roof with roofer's nails. Nail in the hole provided in the flange. Place another bead of plastic cement on top of the skylight flange at the sides and the top as indicated in the drawing.

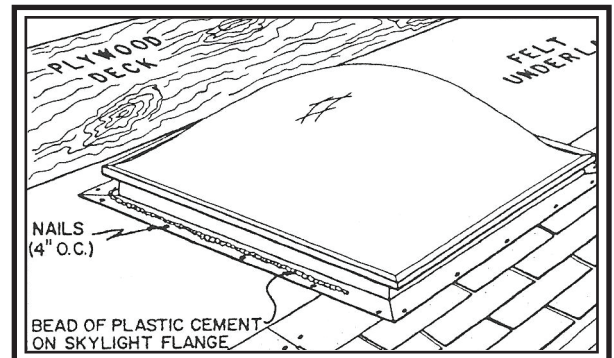

STEP 3: Finish placing the shingles, being careful not to nail through the skylight flange.

